

# TargetiX

The sports shooting simulator is designed to practice skills shooting from a sports pistol caliber 5.6mm (22LR).

The exercise machine is made taking into account ergonomics, dimensions, weight and balance a real gun.

The simulator has an adjustment of the trigger mechanism by length and effort idling Imitation of a shot due to an electromagnet.

The pistol simulator has a mount for the SCATT system (small and large "dovetail" and a hole in the barrel for 9mm.

The weight of the gun is 1060 gr.



The set includes an additional magazine of increased weight by 100 g.

The length of the aiming line is 220 mm.

Release tension - 1000 gr.

## WARNING!

Do not reload the shutter with your hands! It is automatically activated with the help of an electromagnet when the trigger is pressed.

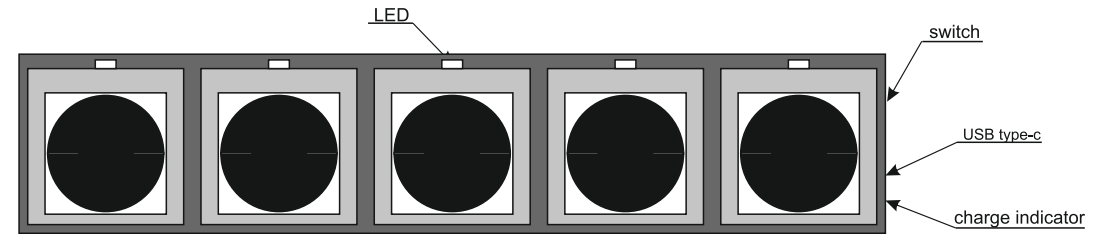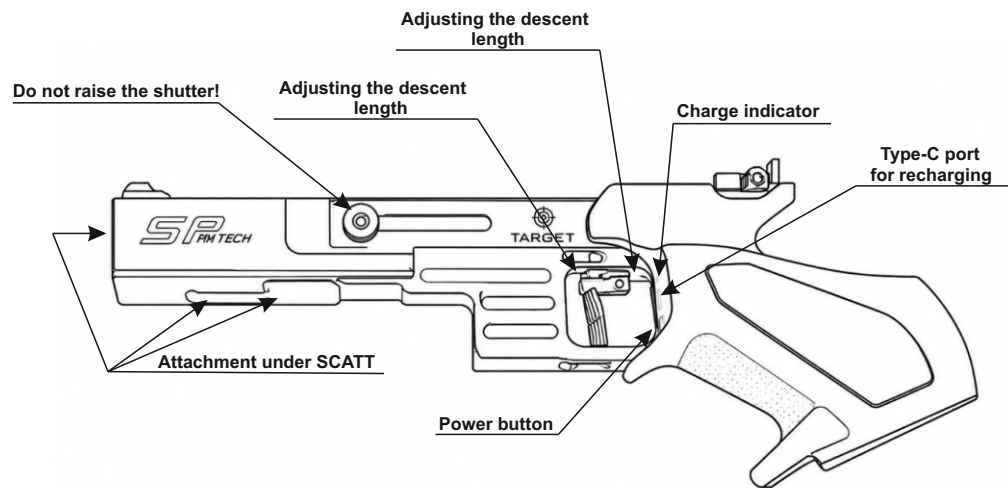

## The simulator body contains:

- LED with mirror
- device on/off switch
- on the side there is a USB type-c connector for charging the battery

## The simulator is controlled by phone via WiFi:

1. Turn on the simulator
2. Connect from your phone to the simulator's WiFi network - TargetiX\_SL2, password - sport\_pistol
3. Go to any web browser and enter the IP address - 192.168.2.2
4. Choose the program you need

Table of simulator modes

| Regime          | Duration of seconds | Number of repetitions |
|-----------------|---------------------|-----------------------|
| Rapid           | 3                   | 5                     |
| Rapid Fire      | 8                   | 1                     |
|                 | 6                   | 1                     |
|                 | 4                   | 1                     |
| Standart Pistol | 150                 | 1                     |
|                 | 20                  | 1                     |
|                 | 10                  | 1                     |

## Wireless button

1. Turn on the simulator
2. Turn on the button
3. Wait 5-8 seconds.
4. The button is connected

(button activates the last program)

WARNING! - do not forget to turn off the simulator to prevent the battery from discharging.